



Demoing Drive Emulation on Voyager M3i with USB Protocol Suite 4.35 and above.

March, 2012


1. Configure Voyager for Device Emulation.
2. Start recording.
3. Run the DriveEmulation.usb3g sample script.
4. Plug in the USB3 cable to the USB3 port on the system.
5. Make sure the LeCroy drive have appeared in Device Manager.

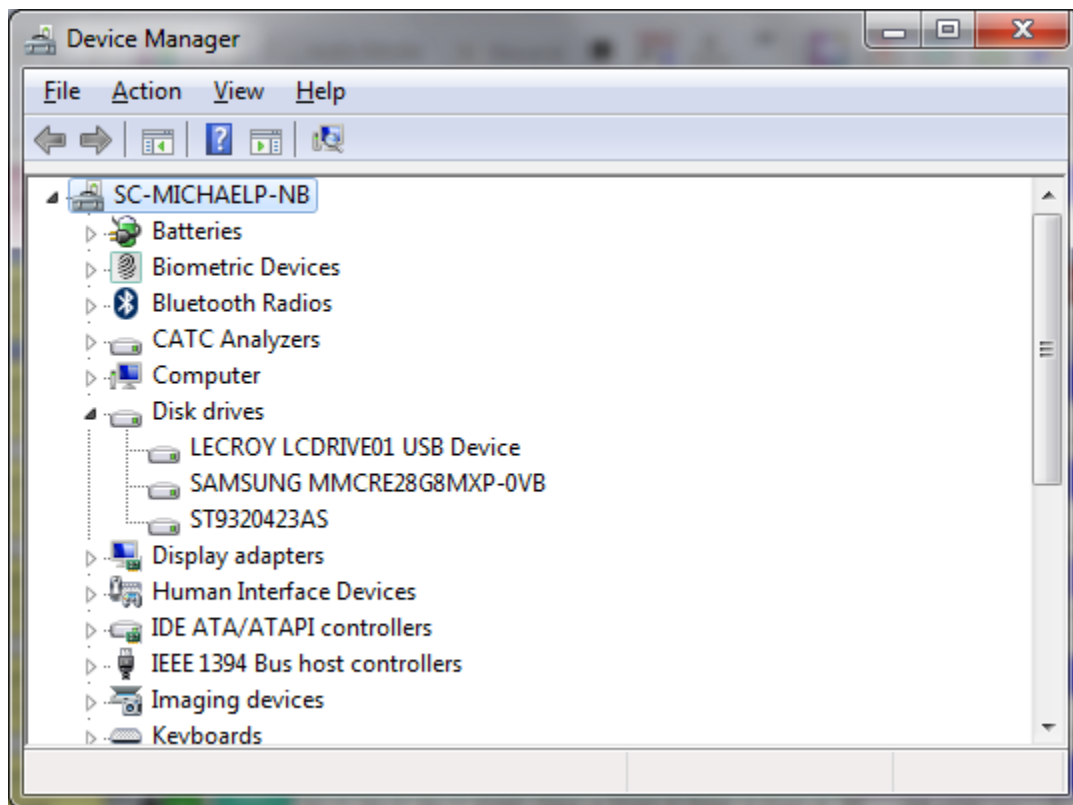


6. Go to Manage computer and select Disk Management.
7. The manager will offer to set Master Boot Record on the new drive. OK that.

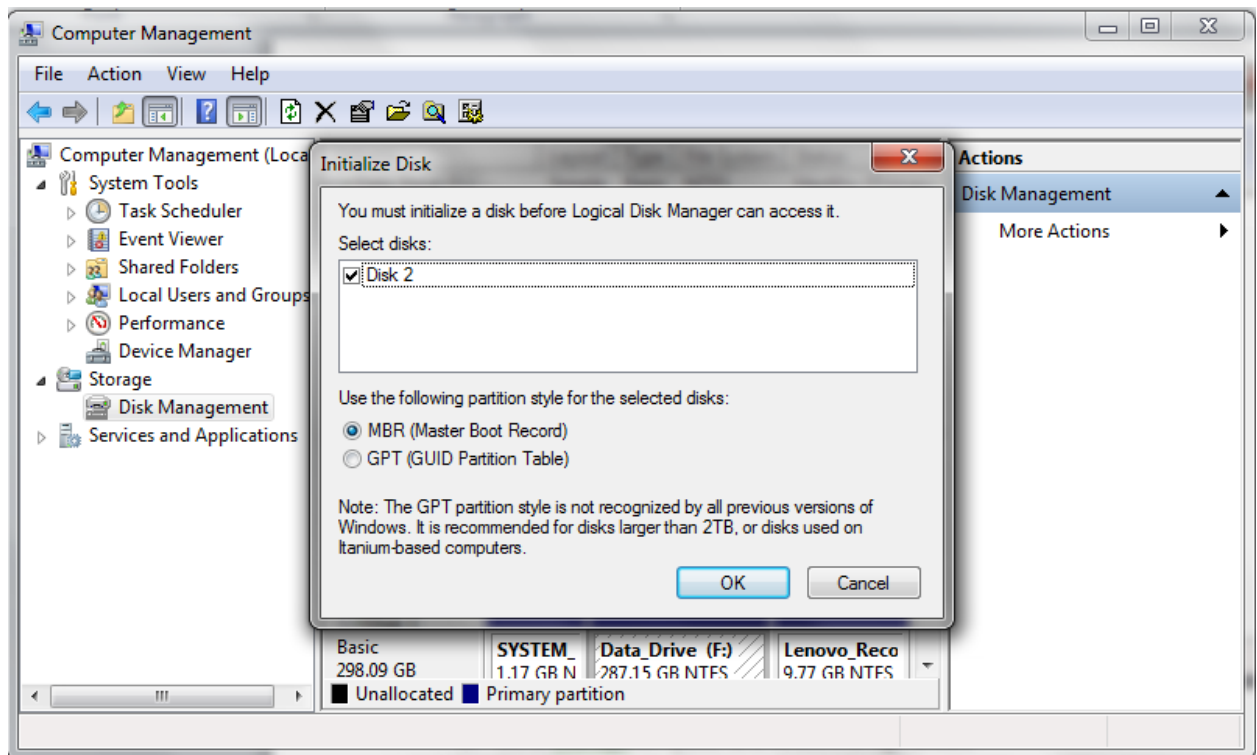

- The drive will be there unpartitioned. Right-click and select "New Simple Volume..."

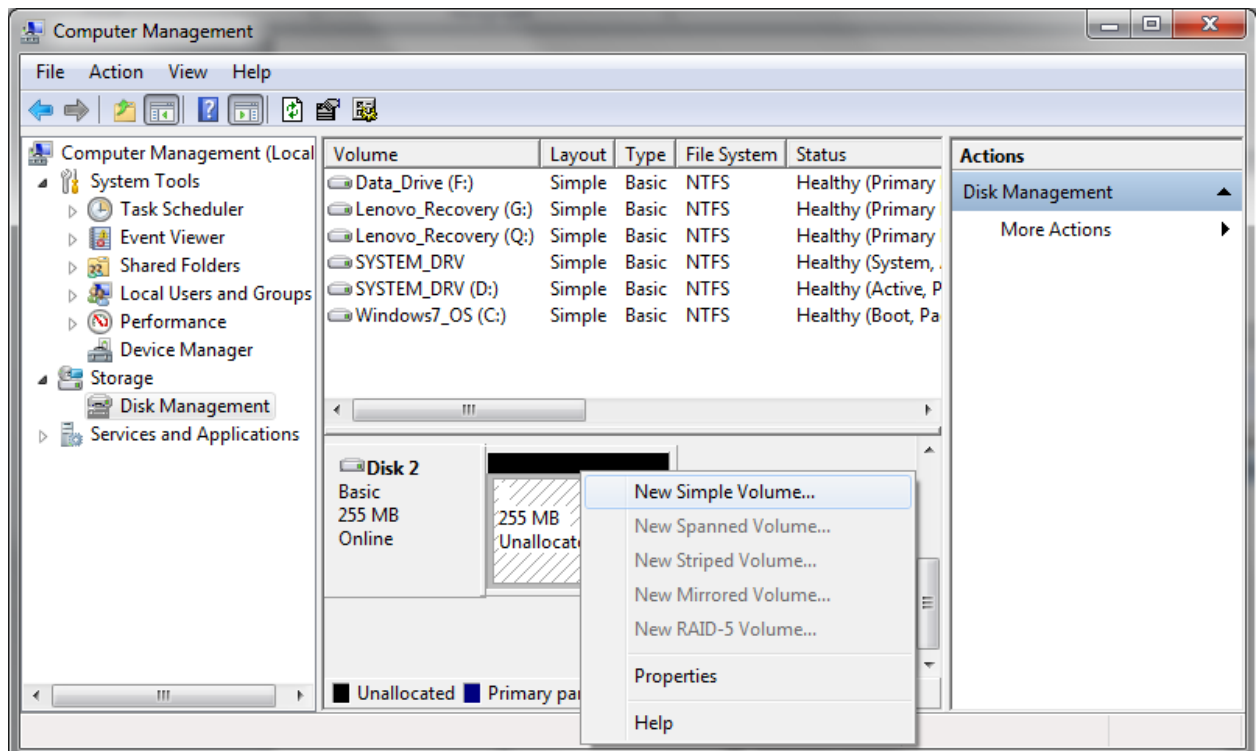

9. Follow the wizard, select FAT32.

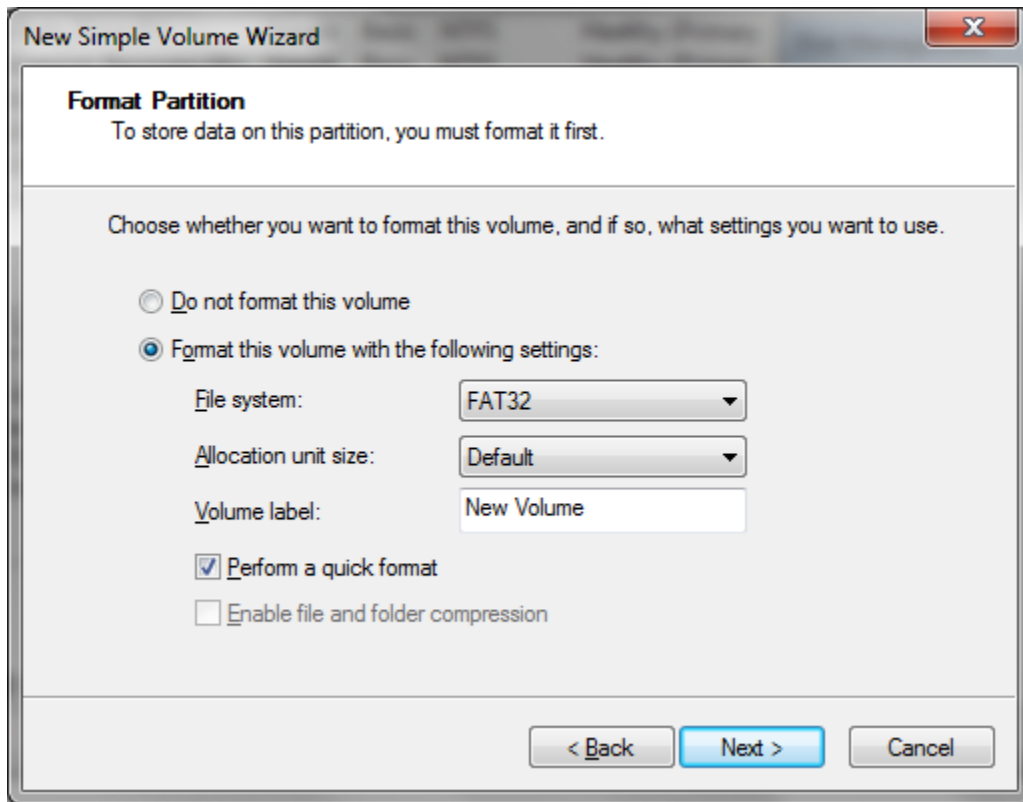

10. Wait till formatting finishes, the new volume will appear after that files can be copied to/from.

